

# INSTALLATION MANUAL FOR THE RAM MODULES

- (English Version)

- \* INSTALL THE RAM MODULES IN THE SERVER BEFORE USE
- \* PLEASE REFER TO THE MANUAL FOR DETAILED INSTALLATION AND INSTRUCTIONS




## Table of the content


Step 1: Opening the securing clips and placing the RAM.....	3
Step 2: Installing the RAM and locking the clips.....	4
Step 4: Securing the RAM by pushing down the middle position.....	5

About the installation for the RAM on motherboard:

### Step 1: Opening the securing clips and placing the RAM

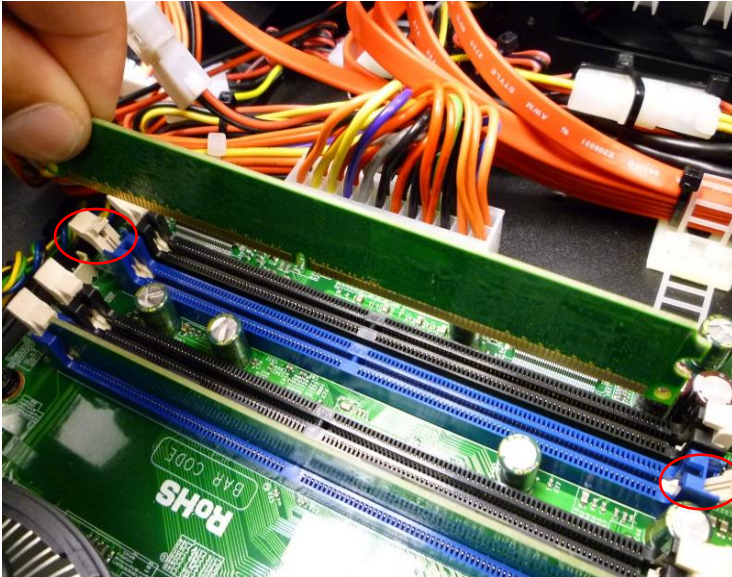


Open the securing clips on either side of the blue memory slot(s) as shown above. (circle in red)

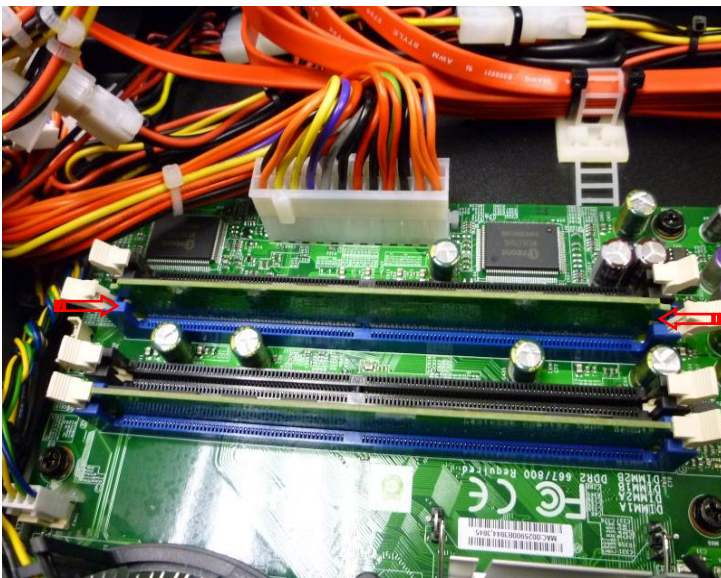


Place the RAM on the blue memory slot and ready to fix as indicated.

## Step 2: Installing the RAM and locking the clips

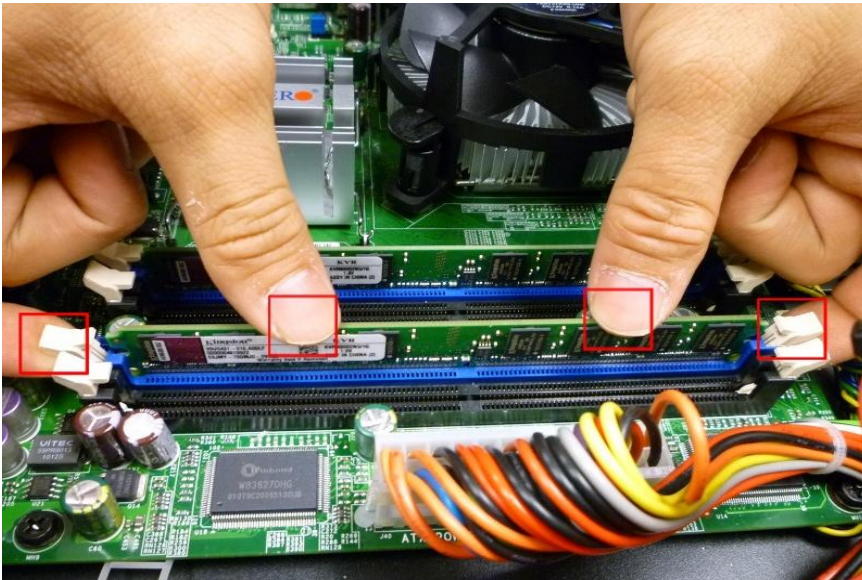


Put your thumb on the RAM as indicated. At the same time, hold your fingers on both sides of securing clips.

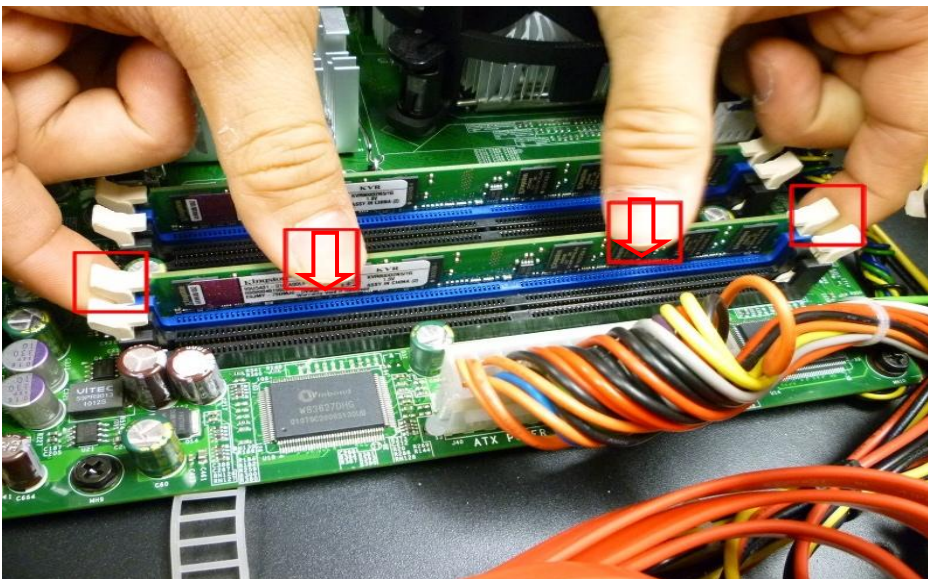

Gently insert the RAM into the memory slot facing downward to the notch. The memory will be inserted properly in one way, so do not try to force it.

#### Step 4: Securing the RAM by pushing down the middle position

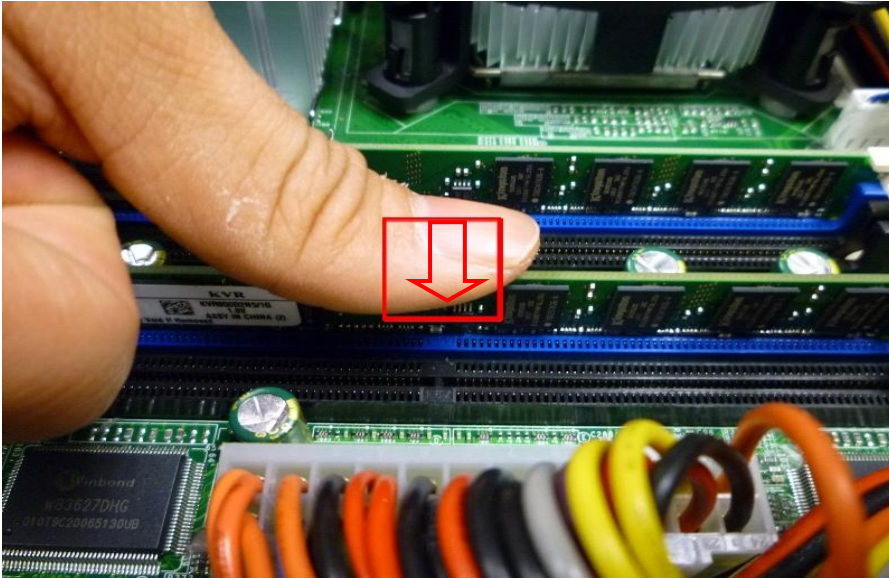

Finally, gently pushing down the middle position of RAM by thumb vertically shown as above.